

# J7\*\*/J80\*/J81\*/J83\* Abbreviated instruction

**ENGLISH** 

- This watch is light-powered. Be sure your watch is fully charged before use.
- For complete instructions for setting, use, charging time and specifications, refer to the full instruction manual: J7\*\*/J80\*/J81\*/J83\* instruction manual

#### **Component identification**

#### 3-hand models



 Illustrations for reference only. Actual appearance of your watch may differ from the illustrations above.
 Some models do not have the second hand.



### Setting the time


 Pull the crown out when the second hand points to 12:00 (0 second).

The second hand stops.

- 2. Rotate the crown to set the time.
  - Move the hands 4 or 5 minutes forward of desired minutes and move them back to the right time to set the time more precisely.
- 3. Push the crown in in accordance with a reliable time source.

The second hand starts moving.

#### 3-hand and date models

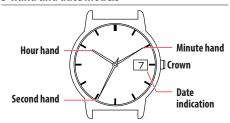

 Illustrations for reference only. Actual appearance of your watch may differ from the illustrations above.



## Setting the time

- Do not adjust between 9:00 PM and 1:00 AM. Otherwise the date indication may change incorrectly.
- Pull the crown out to position 2
  when the second hand points to
  12:00 (0 second).

The second hand stops.

#### 2. Rotate the crown to set the time.

- Change of date indication shows it just became AM. Set the time to ensure proper AM or PM time is set.
- Move the hands 4 or 5 minutes forward of desired minutes and move them back to the right time to set the time more precisely.
- 3. Push the crown in to position O in accordance with a reliable time source.

The second hand starts moving.

## Setting the date indication

- Do not adjust between 9:00 PM and 1:00 AM. Otherwise the date indication may change incorrectly.
- Date indication adjustment is required on the first of the following months: March, May, July, October and December.
- 1. Pull the crown out to position 1.
- 2. Rotate the crown counterclockwise to adjust the date indication.
  - Clockwise rotation moves nothing.
- 3. Push the crown in to position 0 to finish the procedure.

#### 3-hand and date/day models



 Illustrations for reference only. Actual appearance of your watch may differ from the illustrations above.



### Setting the time

- Do not adjust between 9:00 PM and 4:30 AM. Otherwise the date and day indication may change incorrectly.
- Pull the crown out to position 2
  when the second hand points to
  12:00 (0 second).

The second hand stops.

#### 2. Rotate the crown to set the time.

- Change of date indication shows it just became AM. Set the time to ensure proper AM or PM time is set.
- Move the hands 4 or 5 minutes forward of desired minutes and move them back to the right time to set the time more precisely.
- 3. Push the crown in to position O in accordance with a reliable time source.

The second hand starts moving.

## Setting the date and day indication

- Do not adjust between 9:00 PM and 4:30 AM.
  Otherwise the date and day indication may change incorrectly.
- Date indication adjustment is required on the first of the following months: March, May, July, October and December.
- 1. Pull the crown out to position 1.
- 2. Rotate the crown to adjust the date and day indication.
  - Rotate it counterclockwise to change the date indication.
  - Rotate it clockwise to change the day indication.
- 3. Push the crown in to position 0 to finish the procedure.